

WIRED W543

このたびはワイアードをお買いあげいた だきありがとうございました。 ご使用の前にこの取扱説明書をよくお読み のうえ正しくご愛用くださいますようお願 い申し上げます。 なお、この取扱説明書はお手もとに保存し 必要に応じてご覧ください。

④Press button [®] or [©] to set the flashing digits. With each press of button [®], one digit is increased. The セイコーウオッチ株式会社 digits move quickly if button (B) is kept pressed. With each press of button (C), one digit is decreased. The 本 社 東京都港区芝浦一丁目2番1号 〒105-8467

```
la alica de la capa de
  セイコー製品について、修理その他のご相談は、「お買い上げ店」で
うけたまわっております。
  なお、ご不明の占は下記へお問い合せください。
              セイコーウオッチ株式会社
  全国共通フリーダイヤル
  0120-612-911 (下記の最寄地に着信いたします)
  お客様相談室
   〒101-0044 東京都千代田区鍛冶町 2-1-10
  〒550-0013 大阪市西区新町 1-4-24 (大阪四ッ橋新町ビルディング 8階)
  お客様相談係
   F 060-0061 札幌市中央区南一条西 7-20-1
  ・worowoi Tuber印 中央区間 一条四 F20-1
(札幌スカイビル 4階 セイコーサービスセンター内)
〒810-0801 福岡市博多区中洲 5-1-22
(松月堂ビル 6階 セイコーサービスセンター内)
 <del>.</del>
```

<All the segments lightning up>

again to return to the Time display.

digits move quickly if button © is kept pressed.

immediately reset to "00".

₩While in the TIME/CALENDAR SETTING display, the display as shown below will appear if both buttons

® and
© are pressed at the same time. This is not a malfunction. Press button (A) (B) or (C) to return to the TIME/CARENDER display, and then set the time/calendar again following the steps above starting from "1"

When both the hour and minute digits are flashing, change between 12-hour and 24-hour indications can


be made. In 12-hour indication, only "PM" mark is displayed and there is no indication for the AM setting.

(5)Select the hour and minutes digits (12/24-hour indication) by pressing button (A), and then press button (A)

● Second setting: While the second digits are flashing, press button ® or © in accordance with a time

signal to reset the seconds to "00". If button (B) or (C) is pressed when the seconds

count any number between "30" and "59", one minute is added and the seconds are

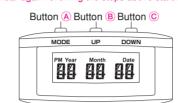


FEATURSE

The watch has the following functions:


- Time/display · · · · · · · · · · Hour, minutes and seconds can be displayed
- Calendar display. · · · · · Year, month and date can be displayed.
- Automatic calendar ·······No calendar adjustment at the end of the month is required from 2004 to 2050.

DISPLAY AND BUTTON OPERATION

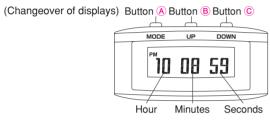

In some models, the orientation of the display screen may be different from the above illustration or the display may look partly divided due to the prints of its glass cover. However, the operation is the same as the above

• With each press of button (A), the display changes in the following order

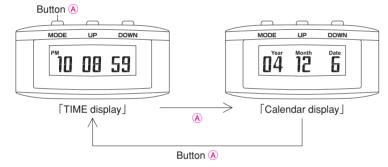

●When the display is changed, numerals and indications on the display screen scroll from right to left. Time display: Current time (hour, minutes, seconds)

Calendar display: Year (the last two digits of the year), month, date

●In the calendar display, "Year", "Month" and "Date" will be displayed above numerals showing year, month and date, respectively.

HOW TO SET THE TIME / CALENDAR

1) Press button (A) to show the Time display




2) Press button (A) for 1 to 2 seconds to show the Time/Calendar setting display



If the watch is left untouched with the digits flashing, it will automatically return to the Time/Calendar display in 1 to 2

③Press button A to select the digits to be adjusted (flashing). With each press of button A, the digits are selected (flashing) in the following order.

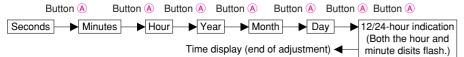

*If button A is pressed while both the hour and minute digits (12/24-hour indication) are flashing, the display will return to the Time display. In case you would like to adjust any digits, press button A for 1 to 2 seconds to show the Time/Calendar setting display again.

SPECIFICCATIONS

. Frequency of crystal oscillator · · · · · · 32,768Hz

(Hz=Hertz····Cycles per second)

2. Loss/gain ····· Average monthly rate: ±30 seconds (in temperatures of between 5°C and 35°C on your wrist)

3. Operational temperature range $\cdots -5^{\circ}$ C $\sim +50^{\circ}$ C

(0°C ~+50°C for the display) 4. Display medium · · · · · Nematic Liquid Crystal, FEM

(Field Effect Mode)

5. Battery Lithium battery SB-AS, 1 piece

6. Battery life · · · · · Approx. 2 years 7. IC (Integrated Circuit) · · · · · · · · · · · · · · · · · C-MOS-IC, 1 piece

* The above specifications are subject to change without prior notice, for product improvement.

NOTE ON THE LIQUID CRYSTAL PANEL

The normal life expectancy for the liquid crystal panel of the watch is approximately 5 years. After that, it may decrease in contrast, becoming difficult to read. Please contact the retailer from whom the watch was purchased to have the liquid crystal panel replaced with a new one. It will be made at cost.

VIVIDIGI

"VIVIDIGI" is a newly developed liquid crystal panel that has various color combinations of segments and background and lights up in various manners, providing wide varieties of displays

reatures

(1) "VIVDIGI" has high light-transmissivity and lightreflectance to give a vivid and clear display.

(2) The segments for digits and the entire background of the display can be illuminated in various colors.

(3) Either the whole display or only the segments are illuminated depending on models.

*Above features of "VIVIDIGI" are embodied differently from model to model.

TO PRESERVE THE QUALITY OF YOUR WATCH

↑ CAUTION

WATER RESISTANCE

Check the dial or case back of your watch for the water resistant quality, and then see the table below

Do not turn or pull out the crown when i

the watch is wet, as water may get inside the watch "WATER RESISTANT" is not inscribed on the back of your watch case. "WATER RESISTANT" is inscribed on the back of your watch case.

X X X X × \bigcirc X X X \times × "WATER RESISTANT 5 10 15 20 BER.", "WATER RESISTANT" and marks inscribed on the back of your watch case. \bigcirc \bigcirc X X \bigcirc X \bigcirc \bigcirc \bigcirc \bigcirc \times X

●ABOUT BATHING

while bathing if it is equipped with water resistance over 10 bar

In that case, please note the following carefully.

Please do not operate your watch (Crown operation, Button operation etc.) When it is wet with soap or shampoo. it sometimes causes a reduction in the water proofing.

When the watch gets warm due to warm water, the watch could gain or lose time to some degree. However, the watch will

return to its usual accuracy at normal temperatures

⚠ WARNING

If your watch is 3 bar water resistant, do not use it in water.


 If your watch is 5 bar water resistant, do not use it in any type of diving including skin diving If your watch is 10 or 20 bar water resistant, do not use it in saturation diving or scuba diving


●PLACES TO KEEP YOUR WATCH







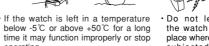

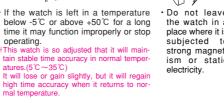





chemicals.

(Ex.: Organic solvents such as benzine and thinner, gasoline, nail polish, cosmetic spray, detergent, adhesives, mercury, and iodine antiseptic soluwatch in a dusty place.

or do not keep it in a drawer having

↑ CAUTION

CARE OF YOUR WATCH
 The case and bracelet touch the skin directly just as underwear. If they are left dirty, the edge of a sleeve may be stained.

with rust of those who have a delicate skin may have a rash.

After removing the watch from your wrist, wipe perspiration or moisture with a soft cloth. This will prevent the watch from being soiled, adding to the life of the gasket.

METAL BRACELET

· Clean the watch is

ch bracelet with a soft toothbrush dipped in water or soapy water. If your watch is not water-resistant, be

LEATHER BAND

When removing moisture from a leather band, do not rub the band with the cloth as this may discolor it or reduce its gloss. Be sure to blot up the moisture using a soft dry cloth.

SOFT PLASTIC BRACELET

If your watch has a soft plastic band such as urethane band, do not leave the watch under a fluorescent lamp or direct sunlight for a long time, or do not leave the band soiled. Otherwise, the band may be discolored, hardened or broken. Also, do not keep the watch in a place where it is exposed to high humidity, or do not leave the band wet with perspiration or water. Otherwise, the band may be discolored in a very short time.

When the band is soiled, rinse it in soapy water. Do not use solvents for cleaning as some solvents may deteriorate the band.

If your watch has a semitransparent urethane band, which is easily discolored, special care should be taken to keep i clean. Depending on the condition of use, the semitransparent band may be discolored after several months of use.

If your watch is not water-resistant, be careful not to get wet with water or sweat. When it gets wet with water or sweat.

wipe it thoroughly dry with a hygroscopic cloth.

●If your watch is 5, 10 or 20 bar water resistant, rinse it in a bowl of fresh water after used in seawater. Do not use chemicals

If your watch has a rotating bezel, clean the bezel regularly. Otherwise, dust will gather under it, making the rotation harder

⚠ CAUTION

● RASH AND ALLERGY

Adjust the bracelet or band so that there will be a little clearance between the bracelet or band and your wrist to avoid accumulation of perspiration.

If you are constitutionally predisposed to rash, the band may cause you to develop a rash or an itch depending on you physical condition.

e possible causes of the rash are as follows

1. Allergy to metals or leathers
2. Rust, dust or perspiration on the watch or band
1. If you develop any skin reactions, take off the watch and consult a doctor immediately.

PRECAUTIONS ON WEARING YOUR WATCH

· When clasping and unclasping the band, you may damage your nail, depending on the type of clasp used with the band.

In case you tumble and fall or bump into others with the watch worn on your wrist, you may be injured by the reason of the fact that you wear the watch.

When you make contact with children, especially with infants, they may get injured or develop a rush caused by allergy.

 If your watch has a light-colored urethane or leather band, special care should be taken to keep it clean, as such bands easily get soiled or discolored. Also, take utmost care not to bring the band into close contact with clothes or bags made of denim and other materials whose color easily come off. The dye may stick to the band to make indelible stains.

⚠ CAUTION

If your watch is of the fob or pendant type, the strap or chain attached to the watch may damage your clothes, or injure the hand, neck, or other parts of your body

● PERIODIC CHECK

We suggest that you have your watch checked by watch dealer every 2 or 3 years or when the battery is replaced for oil condition, battery electrolyte leakage or damage due to water or sweat. After checking the watch, adjustment and repair may be

When the replacing the parts or battery, please specify "GENUINE PARTS", If an old battery is kept in the watch for a long

time, electrolyte leakage from the battery may damage the module.

Be sure to have the gasket and push-pin replaced with new ones by a watch dealer when checking the watch or the battery is

REMARKS ON THE BATTERY

Notes on the battery

When a new normal battery is installed, this watch operates for approximately 2 years.

(2)Monitor battery

The battery in your watch may run down in less than two years after the date of purchase, as it is a monitor battery which is erted at the factory to check the function and performance of the watch

(3)Battery change

The pattery replacement, be sure to have the battery replaced with a new one at the retailer from whom the watch was purchased, and request the battery for exclusive use with the SEIKO watches (2) If the old battery is left in the water for a long time, a malfunction may be caused due to battery leakage, etc. Have it replaced with a new one as soon as possible.

3 Battery replacement is charged even if it runs down within the guarantee period. ©Once the case back is opened for battery replacement or other purposes, the original water resistant quality designed for the watch may deteriorate when it is closed. When you have the battery replaced with a new one, also request the water resistance test pertaining to the water resistant quality of your wtach. If your watch has 10-bar or higher water resistant quality, be sure to have such test performed on the watch every time the battery is replaced.

⚠ WARNING

Do not remove the battery from the watch.
 If it is necessary to take out the battery, keep it out of the reach of children.
 If the child swallows it, consult a doctor immediately as it will adversely affect the health of the child.

⚠ CAUTION

Never short-circuit, tamper with or heat the battery, or never expose it to fire as it may explode, generate and intense heat or catch fire.

intense heat or catch fire.

The battery in your watch is not rechargeable. Never attempt to recharge it, as this may cause battery leakage or damage to the battery. If the watch is left in a temperature below 5°C or above 35°C for a long time, it may cause the battery life to be shortened. Also, the liquid crystal panel may decrease in contrast, and the electroluminescent light may illuminate for a shorter period of time.

■ NECESSARY PROCEDURE AFTER BATTERY CHAGE (RESETTING THE IC)

After the battery is replaced with a new one, or when an abnormal display (broken digits, etc.) appears, follow the procedure below. The built-in IC will be reset and the watch will resume normal operation

Resetting the built-in IC Press buttons (A), (B) and (C) simultaneously for 2 to 3 seconds, and all displays and indications disappear. When the buttons are released, "12:00'00" a.m., Jan. 1st, 2004" will be displayed, set the time and calendar before using the watch.

• After setting the IC

Before using the watch, adjust the following display in the order below by referring to the corresponding sections of

Time/calendar

NOTE ON THE REPLACEMENT PARTS


SEIKO makes it a policy to usually keep a stock of spare parts for its watches for 7 years. In principle, your watch can be reconditioned within this period if used normally. (Replacement parts are those which are essential to maintaining the functional integrity of the watch.)
 The number of years that a watch is considered repairable may vary greatly depending on the condition under which it was used, and normal accuracy may not be achieved in some cases. We recommend, therefore, that you consult the retailer from whom the watch was purchased, when having them repair your watch.
 The case, dial, hands, glass, bracelet, or parts thereof may be replaced with substitutes if the originals are not available.

特長

この時計は、以下の機能をもっています。


- ●「時刻表示機能」・・・「時」「分」「秒」を表示できます。
- ●カレンダー表示機能・・・・・「年」「月」「日」を表示できます。
- ●フルオートカレンダー機能・・・月末のカレンダー修正の必要がありません。2004~2050年

■ボタンの名称と表示の切り替え

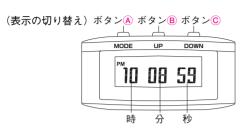

※モデルによっては、時計の向きが異なったりパネルの一部が仕切られている場合がありますが、操作方法は変わ りません。

●ボタンAを押すごとに次の順序で切り替わります。

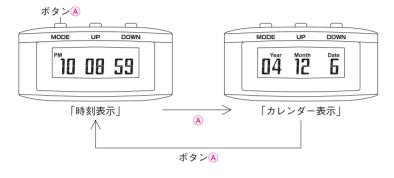

・表示を切り替えると、<u>右から左へスクロール(流れ)表示します。</u>

「時刻表示 |: 現在時刻(時、分、秒)

「カレンダー表示」:年(西暦の下2桁)月、日

・カレンダー表示では、それぞれの数字の上に「Year」(年)「Month」(月)「Date」(日)の文字が表示さ れます。

■時刻・カレンダーの合わせかた

①ボタンAを押して時刻表示にしてください。



※右から左へスクロール

②ボタン Aを1~2秒間押し続けて時刻・カレンダー合わせ状態にしてください。



※この状態で1~2分間操作をしないと時刻表示に戻ります。

③ボタンAを押して、合わせたい箇所を点滅させます。 ボタンAを押すたびに点滅箇所が変ります。



※「時、分」が点滅している状態でボタン風を押すと時刻表示に戻りますので、合わせたい箇所がある場合は、操 作②から行ってください。

④ボタンBまたは©を押して合わせます。ボタンBを1回押すごとに点滅している所の数字が1つずつ進 みます。押し続けると早く進みます。ボタン©押すごとに点滅している箇所が1つずつ戻ります。押し 続けると早く戻ります。

「時、分」が同時に点滅している場合、12時間制表示と24時間制表示を切り替えます。 12時間制表示のときはマーク無し(午前)または「PM」(午後)マーク点灯で午前、午後が表示されます。

⑤ボタン A を押して、「時、分」が点滅する状態(12H/24H切替)にしてから、さらにボタン A を押すと 「時刻表示」に戻ります。

●秒合わせ・・「秒」を点滅させ時報に合わせてボタン®または©を押すと、00秒に合います。 「秒」が30~59のときは「分」が1分くり上がって00秒に合います。

<全点灯表示>

※時刻・カレンダー合わせで「全点灯表示」になるのは、故障ではありません。ボタン®とボタン®が同時に押され ると、このような表示になる場合があります。その場合は、ボタンA、B、©のいずれかを押して、「時刻表示」に 戻してください。次にあらためて、上記の①から合わせ直してください。



■製品仕様

- 1. 水晶振動数・・・32,768Hz(Hz=1秒間の振動数)
- 2. 精度・・・・・平均月差±30秒 (気温5℃~35℃において腕につけた場合)
- 3.作動温度範囲・・-5℃~+50℃ ただし表示機能は0℃~+50℃
- 4.表示体・・・・・FE(電界効果)型ネマチック液晶
- 5. 使用電池・・・・小型酸化銀電池SB-AS:1個 6 雷池寿命・・・約2年
- 7. 電子回路・・・・発振、分周、駆動(C-MOS-IC):1個
- ※上記の製品仕様は改良のため、予告なく変更することがあります。

■液晶パネルについて

この時計の〈液晶パネル〉は、5年をすぎますとコントラストが低下したり、数字が読みにくくなります。 お買い上げ店、または時計店に交換をお申しつけください。有料にて申し受けます。

VIVIDIGIについて

VIVIDIGI(ビビデジ)は色表現やライト点灯、点滅時に様々な光方を実現した新しい液晶パネルです。

主な特長として

- ①光の透過率、反射率が高く、液晶パネルが鮮やかに、はっきりと見えます。 ②デジット(文字・数字)や液晶の背景全体にカラーや様々な仕上げを施す事ができます。
- ③画面全体の発光やセグメント (表示内容) のみの発光ができます。
- ※上記の特長は機種によって異なります

■修理について

- ①この時計の補修用性能部品の保有期間は通常7年間を基準としています
- 正常なご使用であれば、この期間中は原則として修理可能です。(補修用性能部品とは、時計の機能を維持するの に不可欠な修理用部品です。)
- でいる人ないはたのはある。 ②修理可能な期間はご使用条件によりいちじるしく異なり、精度が元通りにならない場合がありますので、修理ご依頼の際にお買い上げ店とよくご相談ください。
- ケース・文字板・針・ガラス・バンドなどは一部代替部品を使用させていただくことがありますので ご了承ください。
- ④修理の内容によっては、修理代が標準小売価格を上まわる場合があります。その他、わからない点がありましたら、 「セイコーウオッチ株式会社お客様相談室・お客様相談係」へお問い合わせください。

■使用上の注意とお手入れの方法

⚠ 注意

●防水性能

日常生活用防水

日常生活用 防水

- ・ 時計の文字板または裏ぶたにある防水性 能表示をご確認の上、使用可能範囲にそって正しくご使用ください。 ・ 水分のついたままリュウズを回したり、 引き出したりしないアイブ
- 引き出したりしないでくた 部に水分が入る場合があり

強化防水 10・15・20 BARか、WATER RESISTと マークの

気圧防水 表示のある時計

い。 ズを回したり、 ださい。時計内 Jます。		::-: W:	40	4210	(,)	1 / 1
	洗顔や雨など	水泳や水仕事	空気ボンベを	空気ボンベや、ヘ	水滴がついた	水滴がついた
	一時的にかか	など長時間水	使用しないス	リウムガスを使用	状態でのボタ	状態でのリュ
	る水滴。	にふれる場合	キンダイビング	する本格的な潜水。	ンの操作。	ウズの操作。
スの裏に ER RESISTANT 示のない時計	×	×	×	×	×	×
スの裏に ER RESISTANT 示のある時計	\circ	×	×	×	×	×
スの裏にWATER ISTANT5・10・15 20	0	0	×	×	0	X

 \bigcirc

X

 \bigcirc

X

入浴について 10気圧以上の防水の場合、時計をつけたまま入浴してもかまいませんが下記のことに注意して下さい。

 \bigcirc

いたはなどのあった。 ・時計に、石けんやシャンプーがついた状態で、リュウズ操作やボタン操作を行わないでください。 (防水機能が維持できなくなることがあります) 温水で時計が温まりますと、多少の進み、遅れを生ずることがあります。ただし、常温にもどれば精度はもとにも どります。

⚠ 警告

- -----・日常生活用防水(3気圧)の時計は水の中にいれてしまうような環境での使用はできません。 ・日常生活用強化防水(5気圧)の時計は、スキンダイビングを含めて全ての潜水に使用できません。 ・日常生活用強化防水(10・20気圧)の時計は、飽和潜水/空気潜水には使用できません。


保管について

る場合があります。



X



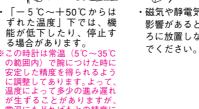




The state of the s





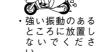





・強い振動のある ・薬品の蒸気が発散しているところ ところに放置し や薬品にふれるところに放置しな いでください。 (薬品の例:ベンジン、シンナーな

どの有機溶剤、およびそれらを含有 するもの一ガソリン、マニキュア、 化粧品などのスプレー液、クリーナ

一剤、トイレ用洗剤、接着剤など一 水銀、ヨウ素系消毒液など) 温泉や防虫剤の入ったひきだしな ど特殊な環境に放置しないでくだ

⚠ 注意

●日常のお手入れ
 ・ケース・バンドは肌着類と同様に直接肌に接しています。汚れたままにしておくとサビて衣類の袖口を汚したり、かぶれの原因になることがありますので常に清潔にしてご使用ください。
 ・時計をはずしたときには、柔らかい布などで汗や水分を拭き取るだけで汚れやケース、バンド及びパッキンの寿命がちがってきます。

・ ・ エバンドは水分を吸い取るように軽く拭いてください。こするように拭くと色が落ちたり、ツヤがなくなったりする場合

ルめいよう。 教質プラスチックバンド ・ウレタンバンドなど軟質プラスチックでできているバンドは、蛍光灯や太陽光の下に長時間放置されたり、汚れが染み込 んだりすることによって、色あせ・変色、あるいは硬くなったり切れたりする場合があります。特に半透明のウレタンパンドは、変色などが目立ちやすく、条件によっては数カ月のご使用で起こり始める場合があります。湿気の多い場所に保管したり、汗や水で濡れたまま放置しておくと、早く変化することがありますので、汚れたときは、石けん水で洗ってください。ただし、化学製品ですので溶剤によっては変質することがあります。

●非防水時計は、水(水道の水はね、雨、雪など)や多量の汗にご注意ください。万一、水や汗でぬれた場合には吸湿性の

上い布などで水分を拭きとってください

るい物なとでかがを払うとつくください。 ●日常生活用強化防水時計は海水中などでの使用のあと、化学薬品類を使用せず、ためた真水で洗ってください。 ●回転ベゼルつきの時計の場合、ベゼル下に汚れ等がたまり、回転が重くなることがありますので清潔にしてご使用ください

⚠ 注意

●<u>かぶれやアレルギーについて</u>

- ・バンドは多少余裕を持たせ、通気性をよくしてご使用ください。・かぶれやすい体質の人や体調によっては、皮膚にかゆみやかぶれをきたすことがあります。
- かぶれの原因として考えられますのは、 1. 金属・皮革に対するアレルギー
- 時計本体及びバンドに発生した錆、汚れ、付着した汗等です
- ・万一肌などに異常を生じた場合は、ただちに使用を中止し、医師にご相談ください。

- <u>その他、携帯上ご注意いただきたいこと</u> ・バンドの着脱の際に中留などで爪を傷つける恐れがありますのでご注意ください。
- ・転倒時や他人との接触などにおいて、時計の装着が原因で思わぬケガを負う場合がありますのでご注意 ください
- ・特に乳幼児を抱いたりする場合は、時計に触れることでケガを負ったり、アレルギーによるかぶれをお こしたりする場合もありますので十分ご注意ください。
- ウレタンや皮革などの素材で、特に薄い色の場合、汚れや変色が目立ちやすくなります。また、デニム などの色落ちしやすい衣料やバック等とご一緒に使用される場合、染料や汚れが付着し、除去できなく なる場合がありますので十分にご注意下さい。

⚠ 注意

・提げ時計やペンダント時計の場合、ひもやチェーンによって衣類や手・首などを傷つけることがありますのでご注意ください。

- ながくご愛用いただくために、 $2\sim3$ 年に一度程度の点検調整をおすすめします。定期的な点検により 目に見えない部分が原因となる損傷を未然に防ぎ、より安心してご使用いただけます。保油状態・漏液 の有無・汗や水や水分の侵入などをお買い上げ店で点検をご依頼ください。点検の結果によっては分解 掃除を必要とする場合があります。
- 部品(電池)交換の時は、「純正部品(電池)」とご指定ください。電池が切れたまま長時間放置します と漏液などで故障の原因になりますので早めに交換をご依頼ください
- ・その時(点検時、電池交換時)にパッキンやバネ棒の交換をご依頼ください。

■電池についてのお願いとご注意

●電池について

(1) 雷池寿命

この時計は新しい正常な電池を組み込んだ場合、その後約2年間作動します。 (2) 最初の電池

お買い上げの時計にあらかじめ組み込まれている電池は、機能・性能をみるためのモニター用です。お買い上げ後上記の期 間に満たないうちに電池寿命が切れることが有りますのでご了承ください。

(3)雷池交換

①電池交換は、必ずお買い上げ店で「セイコー純正SB電池」とご指定の上、ご用命ください。 ②電池寿命切れの電池をそのまま長時間放置しますと、漏液などで故障の原因になりますので、お早めに交換してください。

④雷池交換等で裏ぶたを開閉しますと当初の防水性能を維持できなくなる場合があります。雷池交換の際には、お客様の時 計の防水性能にあった防水検査をご依頼ください。特に10気圧以上のものは検査が必要です。

- _____ 1.お客様は、時計から電池を取り出さない
- でください。 2. やむを得ずお客様が時計から電池を取り 出した場合は、電池はただちに幼児の手 が届かないところに保管してください。
 - ため直ちに医師とご相談ください。

- 破裂、発熱、発火などのおそれがありますので、電池を絶対にショート、分解、加熱、火に入れるなどしないでください。
 この時計に使用している電池は、充電式ではないので、充電すると液漏れ、破損のおそれがあります。絶対に充電し
- ないでください。
 3. 「常温(5℃~35℃) からはずれた温度」下で長時間放置すると 電池寿命が短くなることがあります。また、液晶パネルのコン トラストが低くなったり、パネライトの点灯時間が短くなるこ

■電池交換後のお願い(システムリセット)

電池交換後または、万一異常な表示(読めない表示など)になった場合、以下の操作を行ってください。 時計内部のシステムがリセットされ、正常に機能するようになります。

とがあります。

●システムリセットのしかた

ボタンA、B、Cの3つのボタンを同時に2~3秒押すと、表示が消え、ボタンを離した後、「午前12 時00分00秒2004年1月1日」の設定になります。

システムリセット後は、初期状態になりますので、時刻・カレンダー合わせを行なってください。